

USB Lasers



Worth Data® USB Bar Code Laser Scanners

QuickStart and Installation Guide

WARNING: This equipment generates, uses and can radiate radio frequency energy. If not installed and used in accordance with the instruction manual, it may cause interference to radio communications. It has been tested and found to comply with the limits for a Class A computing device pursuant to Subpart J of Part 15 of FCC Rules, which are designed to provide reasonable protection against such interference when operated in a commercial environment. Operation of this equipment in a residential area is likely to cause interference in which case the user, at his own expense, will be required to take whatever measures may be required to correct the interference.

 **WARNING:** Cancer and Reproductive Harm - www.P65Warnings.ca.gov



The Full USB Laser Scanners Users Manual and Setup Menus are available in PDF format for download at:

<https://www.barcodehq.com/downloads.html>

Introduction

Worth Data's Laser Scanners are USB bar code readers that attach as a USB HID keyboard on a computer running Windows®, macOS or Linux. The USB Laser Scanner provides bar code input data to any host computer program exactly as if the data had been typed at the keyboard, including function and control keys.

USB Laser Scanner Components


In the event the shipping box shows damage on arrival, please note the damage on the carrier's receipt log. Open the box and inspect the contents for damage. If there is visible damage, or if the unit fails to work, contact us with the details of the trouble; we will be happy to send you a replacement.

Your USB Laser Scanner shipment should include all of the following:

1. A **LZ165-USB**, or **LZ365-USB** Laser Scanner.
2. A **C45 USB** Cable/Endcap is factory installed for attaching the Laser Scanner to your computer.
3. A Laser Scanner Desk/Wall Mount Holder

USB Laser Scanner Installation

When you plug the Reader into any USB port on a computer running Windows® 10, 8, 7, Vista, XP, macOS, Mac OS X or Linux, the system will sense the new USB device and proceed to install the necessary software. Some versions of Windows will ask for the original Windows CD to install the needed USB drivers - be prepared. There are no additional drivers needed other than what is already available standard in Windows or macOS.

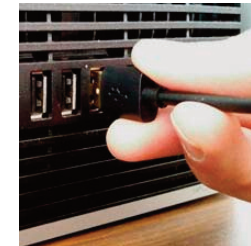

To install the USB Laser Scanner:

1. Plug the flat USB connector end of the cable into an available USB port on the host computer or USB hub.
2. The computer will sense the USB device and install the necessary software. The necessary drivers are already located on your hard drive or installation CD in both Windows and the Mac. In Windows, simply click "Next" or press ENTER at each prompt, including putting in your Windows CD if prompted, until the installation is complete.

If you have a problem with your Windows USB installation, please see **Appendix I, Resolving USB Installation Issue** in the **USB Laser Scanners Users Manual** - the manual can be downloaded from our website at:

www.barcodehq.com/downloads.html

