

# START SETUP

Scan **START SETUP** to enter setup mode



# CLEAR

Clears Preamble & Postamble and resets current individual parameter back to default settings.



# RESET

**Warning:** Scanning this bar code after scanning **START SETUP** will reset the reader back to all of the default parameter settings.



# UPC / EAN – GS1

- |                                     |  |
|-------------------------------------|--|
| *0) Enable UPC/EAN                  | 8) Transmit UPC-E NSC & EAN-8 Flag Ch          |
| 1) Disable UPC/EAN                  | 9) Don't transmit UPC-E NSC & EAN-8 Flag Ch    |
| 2) Enable Supplements               | A) Transmit UPC-E & EAN-8 Check digit          |
| *3) Disable Supplements             | * B) Don't transmit UPC-E & EAN-8 Check digit  |
| *4) Transmit UPC-A NSC              | * C) UPC-E Compressed transmission             |
| 5) Don't transmit UPC-A NSC         | D) UPC-E Expanded transmission                 |
| *6) Transmit UPC-A Check Digit      | * E) EAN-8 observes 9 & A above                |
| 7) Don't transmit UPC-A Check Digit | F) EAN-8 is forced to transmit 8 digits always |



# 2 of 5 Length

Scan 2 digit length (default is 06)



# Codabar

- |                        |                                    |
|------------------------|------------------------------------|
| 0) Enable Codabar      | * 3) Disable CLSI Codabar          |
| *1) Disable Codabar    | *4) Suppress start/stop characters |
| 2) Enable CLSI Codabar | 5) Enable start/stop characters    |



 
# MSI / Plessey

- |                                      |                            |
|--------------------------------------|----------------------------|
| *0) Disable MSI                      | 5) Transmit 1 check digit  |
| 1) Enable MSI 1 Mod 10 check digit   | 6) Transmit 2 check digits |
| 2) Enable MSI 2 Mod 10 check digits  | 7) Enable Plessey          |
| 3) Enable MSI Mod 11/10 check digits | 8) Enable Labelcode 5      |
| *4) Transmit no check digit          | 9) Enable Labelcode 4      |



# Keyboard Country

- |                  |                 |                |
|------------------|-----------------|----------------|
| *00) USA         | 05) Danish      | 10) Portuguese |
| 01) French       | 06) Dutch       | 11) Spanish    |
| 02) German       | 07) Italian     | 12) Swedish    |
| 03) Belgian      | 08) Latin Amer. | 13) Swiss      |
| 04) Fr. Canadian | 09) Norwegian   | 14) U.K.       |



# Postamble

Scan up to 15 characters from the **Full ASCII Menu**. Scan **SET** when completed.



# Beep Tone

- |             |                 |
|-------------|-----------------|
| 0) Lowest   | 3) High         |
| 1) Low      | 4) Highest      |
| * 2) Medium | 5) No Beep Tone |



**SET****END SETUP**

When all changes have been made, scan END SETUP

**2 of 5 Code**

- 0) Enable 1 2 of 5
- \* 1) Disable 1 2 of 5**
- 2) Enable check digit
- \* 3) Disable check digit**
- 4) Transmit check digit
- \* 5) Don't transmit check digit**
- 6) Enable 2 of 5
- \* 7) Disable 2 of 5**

**Code 3 of 9**

- \* 0) Enable Code 39**
  - 1) Disable Code 39
- \* 2) Enable Full ASCII Code 39**
  - 3) Disable Full ASCII Code 39
- \* 4) Enable Accumulate Mode**
  - 5) Disable Accumulate Mode
- 6) Transmit Start/Stop characters
- \* 7) Don't transmit Start/Stop characters**
  - 8) Enable Mod 43 Check Character
- \* 9) Disable Mod 43 Check Character**
  - A) Transmit Mod 43 Check Character
- \* B) Don't transmit Mod 43 Check Character**
  - C) Caps Lock ON
  - \* D) Caps Lock OFF**

**RSS-14 (GS1-14)**

- \* 0) Disable RSS-14**
  - 1) Standard 14 digits
- \* 3) 14 + identifiers**
  - \* 4) 14 + UCC-128 emulation**

**Code 128**


- 0) Disable 128
- \* 1) Enable 128**
- 2) Disable UCC/EAN-128
- \* 4) Enable UCC/EAN-128**

**Terminator Character**

- \* 0) None**
  - 1) None
  - 2) Tab
  - 3) Output Preamble & Postamble normally
  - 4) Preamble=Preamble+Postamble
  - 5) Postamble=Preamble+Postamble

**Code 93**

 - 0) Enable Code 93
- \* 1) Disable Code 93**
  - 2) Enable Full ASCII Code 93
- \* 3) Disable Full ASCII Code 93**

**Characters**

Scan up to 8 sets of hex characters to reassign and delete characters in the bar code output. Scan SET when completed.

**Postamble**

Scan up to 15 characters from the Full ASCII Menu. Scan SET when completed.



**1**



**5**



**9**



**C**

 


SLx-USB Setup Deck



**2**

SLx-USB Setup Deck



**9**

SLx-USB Setup Deck



**0**

SLx-USB Setup Deck

 


**D**

**3**




**7**



**A**



 **E**



SLx-USB Setup Deck



**4**

SLx-USB Setup Deck



**8**

SLx-USB Setup Deck



**B**

SLx-USB Setup Deck



**F**

